

# **6BX/ZX/VIA85/VIA85P**

## **User's Manual Version 1.2**

The information presented in this publication has been made carefully for reliability; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice.

IBM, PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Pentium is a trademark of Intel Corporation

AWARD is a registered trademark of Award Software Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation.

**Trademarks and/or registered trademarks are the properties of their respective owners.**

---

## Table of Contents

<b>Chapter 1</b>	<b>Introduction .....</b>	<b>1</b>
	<b>How this manual is organized .....</b>	<b>1</b>
	<b>Package checklist .....</b>	<b>2</b>
<b>Chapter 2</b>	<b>Features .....</b>	<b>3</b>
	<b>Features of the Mainboard .....</b>	<b>3</b>
	<b>The Mainboard layout .....</b>	<b>6</b>
<b>Chapter 3</b>	<b>Installation .....</b>	<b>7</b>
	<b>System Installation Setups .....</b>	<b>9</b>
	<b>Static Electricity Precaution .....</b>	<b>9</b>
	<b>Jumper Settings .....</b>	<b>10</b>
	<b>System Memory (DIMM modules) .....</b>	<b>12</b>
	<b>DIMM Memory Installation .....</b>	<b>13</b>
	<b>CPU Installation .....</b>	<b>15</b>
	<b>Clearance Requirements .....</b>	<b>16</b>
	<b>Fan Exhaust .....</b>	<b>16</b>
	<b>External Connectors .....</b>	<b>17</b>

### Note:

If there is any change in the content please refer to our website. Regarding the BIOS setting & Driver installation, refer the web site please. ([www.acorp.com.tw](http://www.acorp.com.tw))